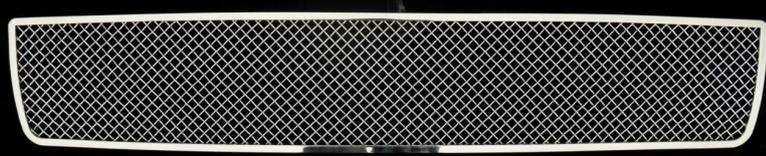
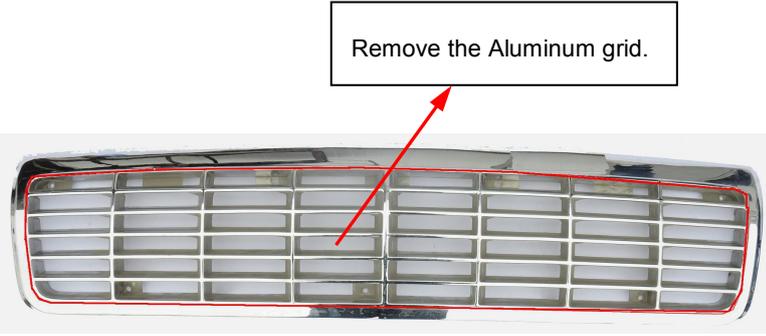


Part#	GR03GFJ03T	Application	91-96 Chevy Caprice Main Upper
-------	------------	-------------	--------------------------------

Parts List	Item	QTY	Part Name	Description	Item	QTY	Part Name	Description
	1	1	Mesh Grille	Stainless steel	3	6	Nut	M4
2	6	Bolt	M4×20	4	6	Washer	/	

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Pop hood, remove the black plastic cover (on top of OEM grille / front panel) from vehicle. This will allow access to the rear of the grille shell.	
3	Remove the Aluminum grid.(As show)	
4	Center the grille into the opening of the factory grille shell. You need mark and drill six holes. Be sure the bolts are through the grille shell.	
5	Secure the grille using the nuts and washers from the back side of the OEM grille shell.	
6	Make sure the grille is centered and tighten the fasteners.	
7	Reinstall the black plastic cover which was removed in step 2.	
8	Installation completed!!!	

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!